

このたびは、アナログ・ディスク入力ボードAD-30をお買い上げいただきまして誠にありがとう ございます。このオプション・ボードは、リアパネルのオプション用スロットに増設して、アナログ・ プレーヤーの再生にご使用ください。

使用方法は、ボードを増設する機器により異なりますので、使用前に必ず各機器の取扱説明書を 参照してください。



AD-30

取扱説明書

②S2、S3:FILTERーサブソニック・フィルターのON/OFF *S2、S3の両スイッチとも必ず同じ設定にしてください。



このフィルターは、可聴帯域外の超低域25Hz以下を-12dB/ octaveという急峻な特性でカットし、レコードの反りによる ウーファーのゆれを防いだり、超低域ノイズが可聴帯域内へ 悪影響をおよぼすことを防ぎます。

GS4: MC/MM−イコライザーゲインの切替

*S4は左右チャンネル同時に設定されます。

スイッチを正面から見た図を示しています。	MM:高出力電圧のMM型力	
	「ゲイン し入力インピーダンス	: 40dB
MM ↓ □ □ 出荷位置 1, 2 : OFF	L入力インピーダンス	: 47kΩ
	MC:出力電圧が低いMC型のカートリッジのポジションです。	
MC I 2 1, 2 : ON	Γゲイン	:66dB
	「ゲイン し入力インピーダンス	: S1で切替え

取り付け方法

● 増設する機器の電源を切ります。

2 リアパネルのオプション用スロットのサブパネルを外しま す。(図1参照)

※外したサブパネルは保管しておいてください。

③オプション用スロットの上下のガイドレールに沿って、オプ ション・ボードを挿入(図2参照)します。コネクターに当っ て止まったら、少し力を入れてコネクターを完全に差し込 みます。(パネル面が同一になればOKです。) ④上下のネジ2カ所で確実に固定します。



- 注意 ●オブション・ボードを抜き差しするときは、必ず増設する機器の電源を切る。
 - 電源を入れたまま抜き差しすると、故障の原因となります。
 - ●サブパネルを外したとき、スロット内部に手などを入れない。(スロット内部に、オプション・ボード以外は入れないで) ください。)
 - 部品やハンダ、コネクターの接点部分を手で触らない。手で触ると接触不良や回路が故障する原因となることがあり ます。ボードを持つ場合にはプリント板の外周やパネル部を持ってください。
 - オプションの取り付けネジは手で完全に締める。締めつけが不完全ですと、端子がグラウンドから浮いて接触不良 となり、故障の原因となることがあります。
 - ●入力端子やコネクターなどに接点復活剤や導電剤などは絶対使用しない。これらによる不具合は保証外となります。

お願い

製品に対するお問い合わせ、または異常が認められるときはお求めの当社 製品取扱店または、当社品質保証部へご連絡ください。 お客様カードは付属していません。(ご購入日は出荷日を参照いたします。)

アキュフェーズ株式会社

〒225-8508 横浜市青葉区新石川2-14-10 TEL 045(901)2771(代)

30Ω

1.2:ON

3, 4 : OFF

Accuphase **Analog Disc Input Board**

Thank you for your purchase of the AD-30 analog-disc input board. This optional board enables playback of analog discs. The board installs into an option slot on the rear of your supporting Accuphase device.

Note that usage procedures vary according to the device. Please be sure to read your device's documentation before starting use.

Using the AD-30

* In components with two slots, two boards can be installed.

Õ LEFT, RIGHT analog record player input jacks

Connect the output cable from the analog record player to these jacks.

GND terminal

O INPUT

RIGHT

©

Connect the ground cable that emerges from the analog record player to this terminal.

DIP switches S1, S2, S3, S4 Set these switches to the required positions before inserting the board.

Note: Use a sharp pointed object to move the switch levers and make sure that the levers are set fully to one side. If a lever is set only half-way, correct operation is not possible.

To ensure expected performance, push each switch bit fully into the appropriate position using a thin-tipped object.



S1: MC LOAD – MC input impedance selector

(Illustration shows front view of switch.) 300Ω 1. 2. 3. 4 : OFF ON 1 4 3, 4 : ON 100Ω 1, 2 : OFF 1, 2 : ON 300 3, 4 : OFF

* The S1 setting affects both the left and right channels.

As a general guideline, set this switch as follows :

For MC cartridges with internal impedance of 20 ohms or more : 100 ohm or 300 ohm position

For MC cartridges with internal impedance of less than 20 ohms : 30 ohm or 100 ohm position

Generally, the input impedance setting should be about 2 to 3 times the rated cartridge impedance.

However, since the requirements of some cartridges may vary, the final setting should be determined by ear.

AD-30

INSTRUCTION MANUAL

2S2, S3: FILTER - Subsonic filter on/off



* Be sure to set both the S2 and S3 switches to the same position.

This filter has a cut-off frequency of 25 Hz and a steep attenuation slope of -12 dB/octave. It cuts off unwanted subsonic signal components without affecting the audible range.

S4: MC/MM – Equalizer gain selection

	* The S4 setting affects both the left and right channels.
(Illustration shows front view of switch.) MM UN 1 2 MM 2 1, 2 : OFF	MM: Use this position for moving magnet cartridges with high output Gain: 40dB Input Impedance : 47 kohms MC: Use this position for moving coil cartridges with low output
MC	Gain : 66dB Input Impedance : As selected with S1

How to Install

Turn off the device power.

- **2**On the rear panel, remove the slot cover of the slot you wish to use. (see Fig. 1) Retain the slot for future use.
- Insert the board along the top and bottom guide rails in the slot (see Fig. 2).

Push the board in gently until it touches the connector at the back of the slot, and then give it a firmer push so that it seats fully into the connector.



OSecure the board by screwing in the top and bottom screws.

- Turn off the device power before installing or removing option boards. Installing a board Caution while power is on may damage the equipment.
 - Keep fingers out of the opened slot. Do not place anything other than the board into the slot.
 - Avoid touching the board's soldered areas, connector contacts, and components. Touching these areas may damage the circuitry or the contact. Hold the board by the edges or along its panel.
 - Tightly screw in the two screws all the way (by hand). If screws are loose, terminals may separate from ground, resulting in poor contact or equipment damage.
 - Do not use electrical contact enhancers or conductivity agents on inputs and cable connectors. The warranty does not cover damage caused by these materials.

ACCUPHASE LABORATORY, INC.

YOKOHAMA, JAPAN